

动感地带/M-Zone
震动按摩棒

说明书



第一次使用之前，请认真阅读此说明书



RoHS

FC

UK
CA

关于产品：

动感地带震动棒是一款独特的按摩器，超非凡的外型设计，既新怡又私密。9频率震动刺激G点，体验不同的高潮，使您激情澎湃，欲罢不能，让兴奋持续不断，同时添加了APP版本，乐趣更丰富，多种模式等您来解锁。其表面材质采用优质的硅胶和ABS，柔软亲肤。

产品信息：

产品名称
动感地带

防水
IPX6

产品编号
YL003

净重
70g

材质
食品级硅胶+ABS

 
电池容量
250mah

功能
3+6频震动


充电时间
1.5小时

噪音
≤50dB

使用时间
1.5小时

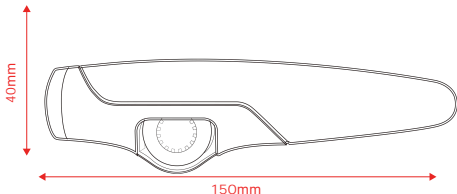

产品功能：

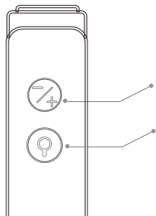 

长按2秒开启/关闭产品按

开启震动功能
再按切换震动频率

 
LED灯指示：

工作时：指示灯长亮

电量不足：指示灯闪烁

正在充电：开关键灯闪烁

充电完毕：开关键灯长亮

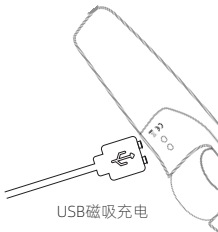

USB磁吸充电

APP使用方法：



APP二维码
(Android / iOS 系统)

用手机扫描此二维码下载APP



产品二维码

用APP扫描此二维码，绑定设备
也可输入产品编号：0397



1. 请第一次登录，请点击“新用户注册”。



2. 完成注册后，请输入电子邮箱帐户和密码登入。



3. 首次登入，请按“+”键绑定您的设备。



4. 请扫描产品二维码，或者输入设备编号:0397，登入设备。

质保说明：

本情趣用品的质保时间为购买日期起1年，任何因产品制造或材料缺陷引起的质量问题均属于质保范围。如果您有任何此类质量问题并在质保期内请通知我们，我们将免费为您更换产品。质保范围包括影响产品功能的零部件质量问题，但不包括由于长期使用造成的外观磨损或由于错误操作、疏忽或意外造成的磨损或损坏。任何尝试打开或分解产品（或其附属配件）造成的损坏也不在质保范围内。

 
安全提示：

注意卫生，避免与他人共用您的私密用品。
使用过程中若出现不适，请立即停止使用。
建议选择水溶性润滑液与本品配合使用，以增加舒适感。
请勿以按摩油或润手霜作为润滑液，以免损坏产品材质。
若本品表面出现破损现象请立刻停止使用。

清洁与存放：

每次使用前和使用后都请将本品彻底清洗干净。
建议您使用成人用品按摩器专用清洁剂来清洗本品。
您还可以用温水和除菌香皂清洗，然后用干净的热热水冲洗，最后用干爽的毛巾轻拭至完全干燥为止。
请勿使用消毒水以及含酒精或丙酮的清洁剂来清洗本品。
请存放于清洁、干爽的地方，避免阳光直射及风干。
请与其他硅胶类或其他材质的情趣用品分开放置。
请将本品放置在儿童接触不到的地方。

本说明书内容最终解释权归本公司所有，如产品升级或修改，恕不另行通知。

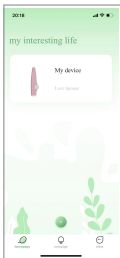

5. 设备添加成功后，请点击“我的”查看“操作指南”



6. 进入功能界面开启快乐之旅程。

充电提示：

首次使用此产品，请先将其充满电，请注意充电时不能使用。

免责声明：

 
本品仅限年满18周岁成年人作为玩具使用。请勿过于频繁或超长时间使用本品。使用者请自行承担产品使用风险。

生产厂家或零售商均不承担使用本产品所产生的任何法律责任。请注意本品不具备治愈任何性方面疾病的功效。

M-Zone

Vibrational massager

User Manual



Before first use, please read the instructions below carefully.



RoHS



UK
CA

About this Device:

M-Zone is a unique massager, super extraordinary appearance design, both new Yi and private. 9 frequency vibration to stimulate the G-spot, experience different orgasms, make you passionate, can not stop, so that the excitement continues, while adding the APP version, more fun, a variety of modes and so you to unlock. Its surface material is made of high-quality silicone and ABS, soft and skin-friendly.

Product Information:

Name of product
M-Zone

Waterproof
IPX6

Product Number
YL003

weight
70g

Materials
silicone+ABS

 
Battery Capacity
250mah

Function
3+6 Vibration modes


Charging time
1.5h

Noise
≤50dB

Working time
1.5h

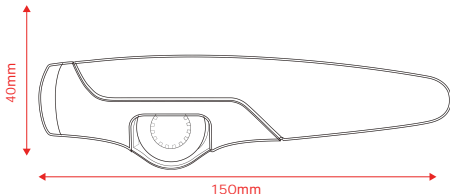

Product Features:

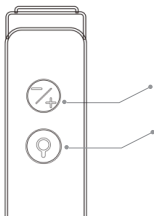 

Press for 2 seconds to turn on / off.

Press shortly to shift Vibration modes.

 
LED light indication:

Working: The indicator light is long bright

Low power: The indicator is blinking

Charging: The (🔑) key light flashes

Charge completed: The (🔑) key light on

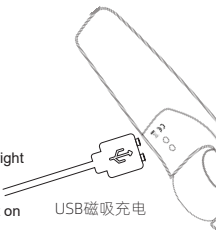

USB磁吸充电

How to use the APP:



 
Android / iOS

Scan the above QR code with your mobile phone to download the APP.



Product QR Code

Use the APP to scan the QR code above to bind the device.
Product number: 0397

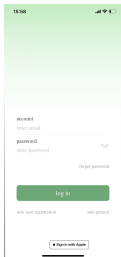

1. First time login, please register first Click on "New User Registration"



2. Complete registration with your cell phone number or email address and enter your account and password to log in to the app.



3. Please click "+" to bind your device after the first login.



4. Scan the product QR code, or enter the device number:8397

Warranty Description:

This product warrants this device for a period of one year, after the date of original purchase against defects due to faulty workmanship or materials. If you experience any factory/assembly defects, please contact us and we will do our best to solve your issues as soon as possible.

Caution: please do not take your vibrator apart by yourself or by an unauthorized repair shop, as your warranty will automatically expire.

Safety tips:

Avoid sharing this device with others due to hygiene concerns. Only water based lubricant is recommended to use with this product. Do not use massage oils or hand cream as lubricants for this device, as you will damage its silicone soft touch surface. Stop using this device if its tip is chipped or broken or has sharp edges.

Cleaning and storage:

Always clean your device thoroughly before and after each use. Clean your device with an antibacterial toy cleaner.

Alternatively, you can wash the device with warm water and soap, rinse with clean hot water and pat dry with a clean towel.

 
Hard detergents, disinfectants, acetone or alcohol are not recommended to use to clean your device.

Store your device in a clean and dry space and keep it out of children's reach.

Applicable for ALL products, the model may be changed for improvements without notice.



5. After adding the device successfully, please click "mine" to view the "Operation guide".

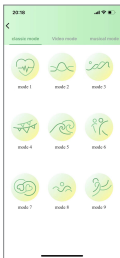

6. Click on the function interface to start the happy journey.

Charging tips:

Make sure this product is fully charged before first use. It will NOT work while charging!

Disclaimers:

This product is to be used as a novelty for people over the age of 18 only. Users of this item do so at their own risk. It should not be use on prolonged or frequent basis. Neither nor its retailers assume any responsibility or liability for the use of this product. This product doesn't claim to cure any disease or STI.